

SO ROAD movie

Media Player Hard Disk Ultra Mobile



USER MANUAL



 

 



 
PC

Table of Contents

1) Important information	3
2) Safety & Precautions	
- Do's and Don'ts	4
- Limitations and Usage Precautions	4
3) Features	7
4) Specifications	8
5) Front and Rear Panel	9
6) Remote Control	10
7) Using the device	11
8) Installation and Connection	15
- Connection with ordinary (Composite) Tv output	15
- Connection to Component output	15
- Connection to Coaxial output	16
- Connection to Optical output	16
- Connection to Computer	16
9) So Road Movie Setup Menu	17
- Audio/Video Setup	17
- Setup/Various	18
- Firmware Setup	19
- Driver installation for Windows ME/XP/2000	20
- Video Files Playback	21
- Audio Files Playback	22
- Photo Files Playback	23
- Mixed Files Playback (MISC)	24
- Playlist	25

1. Important Information

Congratulations for having bought this product. We are sure that you will be entirely satisfied with this multi-media player. Please take some time to read thoroughly this manual of Instruction so that you can use the unit to its best possibilities. Keep carefully this instruction manual and refer to it any time when you will need it.

	In case of a faulty operation, do not attempt to repair the unit yourself. Opening the unit have you exposed to electrocution hazards. Please refer to a qualified person.
	Do not use this unit near any heating source, especially hot air vents, stove or any other appliance producing heat. Do not Expose this unit to temperatures lower than 5°C or higher than 35°C.
	Do not use this unit near a humid area as a bath, sink, swimming pool or a flowerpot.
	Do not handle the supply cable if you have wet hands. Do not use a damaged power cable.
	Do not place your unit in front of a light projector or near a heating source.
	Do not use any substance containing alcohol, gasoline, detergent or any other flammable products to clean the surface of the unit.
	Do not drop the unit or let it be subjected to impacts that could seriously damage your unit or the hard drive.
	Do not let any liquid or foreign substance be inserted inside the unit that could result in a short circuit with fire or electrocution hazards.
	Do not cut, deteriorate, or place any heavy object on the power cable that could result in a short circuit with fire or electrocution hazards.

2.Safety & Precautions

Do's and Don'ts

Do's

Unplug the player during lightning storms or when unused for long periods of time.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched, particularly at plugs, or at the point where they exit from the player.

When connecting or disconnecting AV cables or USB, disconnect the power first.

Do read all safety information and follow all instructions in this user manual.

When cleaning the So Road Movie product, disconnect the power and then wipe the unit with a soft piece of dry cloth. Do not use any chemicals or sprays for cleaning.

Visit danedigital.com for additional product information & for troubleshooting.

Don'ts

Don't expose your So Road Movie unit to heat sources or high temperatures.

Don't expose your So Road Movie unit to water, oil, dust or magnetic materials.

Don't block the vents. Free airflow should be maintained around the unit.

Don't attempt disassembling or remodeling the unit.

Don't drop the So Road Movie unit. This might cause irreversible damage to the unit and the Hard Drive.

Do not touch the power plug with wet hands or use defective power cables & electric outlets. Doing so might result in electric shock or fire. Only use attachments accessories specified by the manufacturer.

Do not mix batteries (old and new or carbon and alkaline, etc.) in the So Road Movie Remote Control. Remove batteries when the unit is not used for a long time.

2.Safety & Precautions

Limitations and Usage Precautions

Please read the following Limitations and Usage Precautions before using your So Road Movie player.

While So Road Movie players support dozens of file formats and codec, they are not intended to work with every codec-variation. So Road Movie players provide limited support to standardized versions of codec as stated in the Technical Specifications of this manual.


Turn off your So Road Movie player when connecting or disconnecting USB devices. Failure to do so may result in malfunction and/or loss of data on your USB device.

Step-by-Step:

- Turn on your computer and launch Windows
- Connect the So Road Movie
- Let Windows search for and automatically install the driver.
- Open "My Computer" to view your external hard drive.

If the system does not recognize the player before the cable has been connected, connect the device before launching your operating system.

Extraction Procedure :

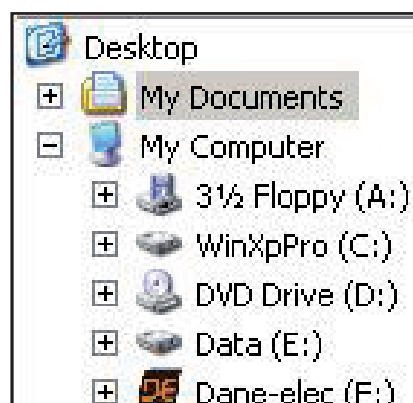

For the security of your player and to ensure that no data is lost, please always follow the procedure below to disconnect your device. Otherwise, an error message will appear on the screen.

- Turn off all applications
- Click on the Task Bar icon for external storage devices
- Select your external hard disk and confirm that you would like it to be stopped
- Disconnect the USB cable that connects the So Road Movie to the computer.



Note: Before disconnecting any cables from your So Road Movie, turn it off.

2.Safety & Precautions

- We strongly recommend backing-up your data or media files stored on the So Road Movie. Power surge, HDD-failure, accidental deletions are common causes of data loss. Place your So Road Movie player away from magnetic sources.
- So Road Movie supports 2.5" Hard Disk Drives only.
- When connected to the computer through the USB cable the So Road Movie player works like an external USB storage device (During this operation, there is no video/audio playback).
- To resume playback mode, disconnect the USB cable connected to your PC and turn on the So Road Movie player.
- The supplied cables and accessories are recommended for customized best performance of the So Road Movie Media Player. Using any other (after-market) cables or accessories may not provide best performance
- In order to unplug your So Road Movie Media Player, press the STOP button and turning off the power before removing cables.
- Do NOT open the unit and service or modify the basic assembly. Do NOT modify the firmware of the So Road Movie unit. Improper or unauthorized repair will VOID your warranty coverage.

3. Feature



Enjoy your Movie and Video Files on TV !

Supports a variety of digital video files like DivX® 3/4/5, Xvid, MPEG1, MPEG2, MPEG4, DVD(IFO, VOB), VCD(DAT). Ideally suited for backing up all your DVD movies on a hard-Disk for easy access.



Digital Music Box

A perfect companion for the music junkies. Play variety of audio files like MP3, OGG, WMA etc. Advanced in-built Jukebox supports customized playlists and music shuffle/repeat functions.




Multilanguage Subtitles

Supports multi-language .SMI, .SRT, .SUB subtitle files (for use with DivX®, XviD, AVI video and movie files)




Digital Photo Album

Now enjoy your vacation photos with the family. Store and Playback all your digital photos. Enjoy customized Slideshows with background Music.

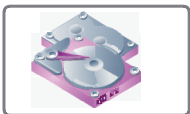

Portable HDD Storage

Quite simply, an ideal mass-storage device for all your backup and digital storage needs.

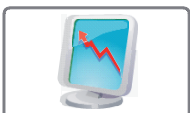

Easy Firmware Upgrading

A Simple and Efficient firmware upgrade process.
(Download: www.danedigital.com).

Firmware Upgrades provide continuous support to new codec and formats.



Car Media Center (Optional)


So Road Movie can also be used in a car with its optional car pack.

The Car Pack bundle contains Car Power Adapter, Ext IR Extender, Compact Remote Control and Audio Cable

4. Specifications

Supported File Formats	Video	MPEG1/2, Div3.11, Div4.0, Div5.0, Divx, Xvid, DVD(IFO, VOB), VCD(DAT), M2V, ISO
	Audio	AC3, MP2, MP3, DTS pass through, Ogg, WMA, MPGA, MPA
	Photo	JPEG
Supported Languages	SMI, SRT, SUB, Multi-Subtitle	
Input & Output	USB 2.0	
	A/V port	
	HDTV : Component Video	
	Audio : Coaxial, Optical	
	IR-Ext	
User Interface	Full Featured IR-Remote control Button : Power, OK, Stop, Setup, Up/down/left/right Navigation	
Operating System	Windows ME, 2000, XP, Vista or later	
HDD Type	2.5" SATA Hard Disk	
Partition Type	FAT32, NTFS	
Power	External 5V/2A DC adapter	
Dimensions	78mm(W) X 136mm(H) X 20mm(L)	
Retail Kit Includes	So Road Movie Media Player, Remote Control, A/V Cable, Component Cable, USB Cable (for PC), 5V Adaptor, Manual, Driver CD, Batteries	

5. Front and Rear Panel

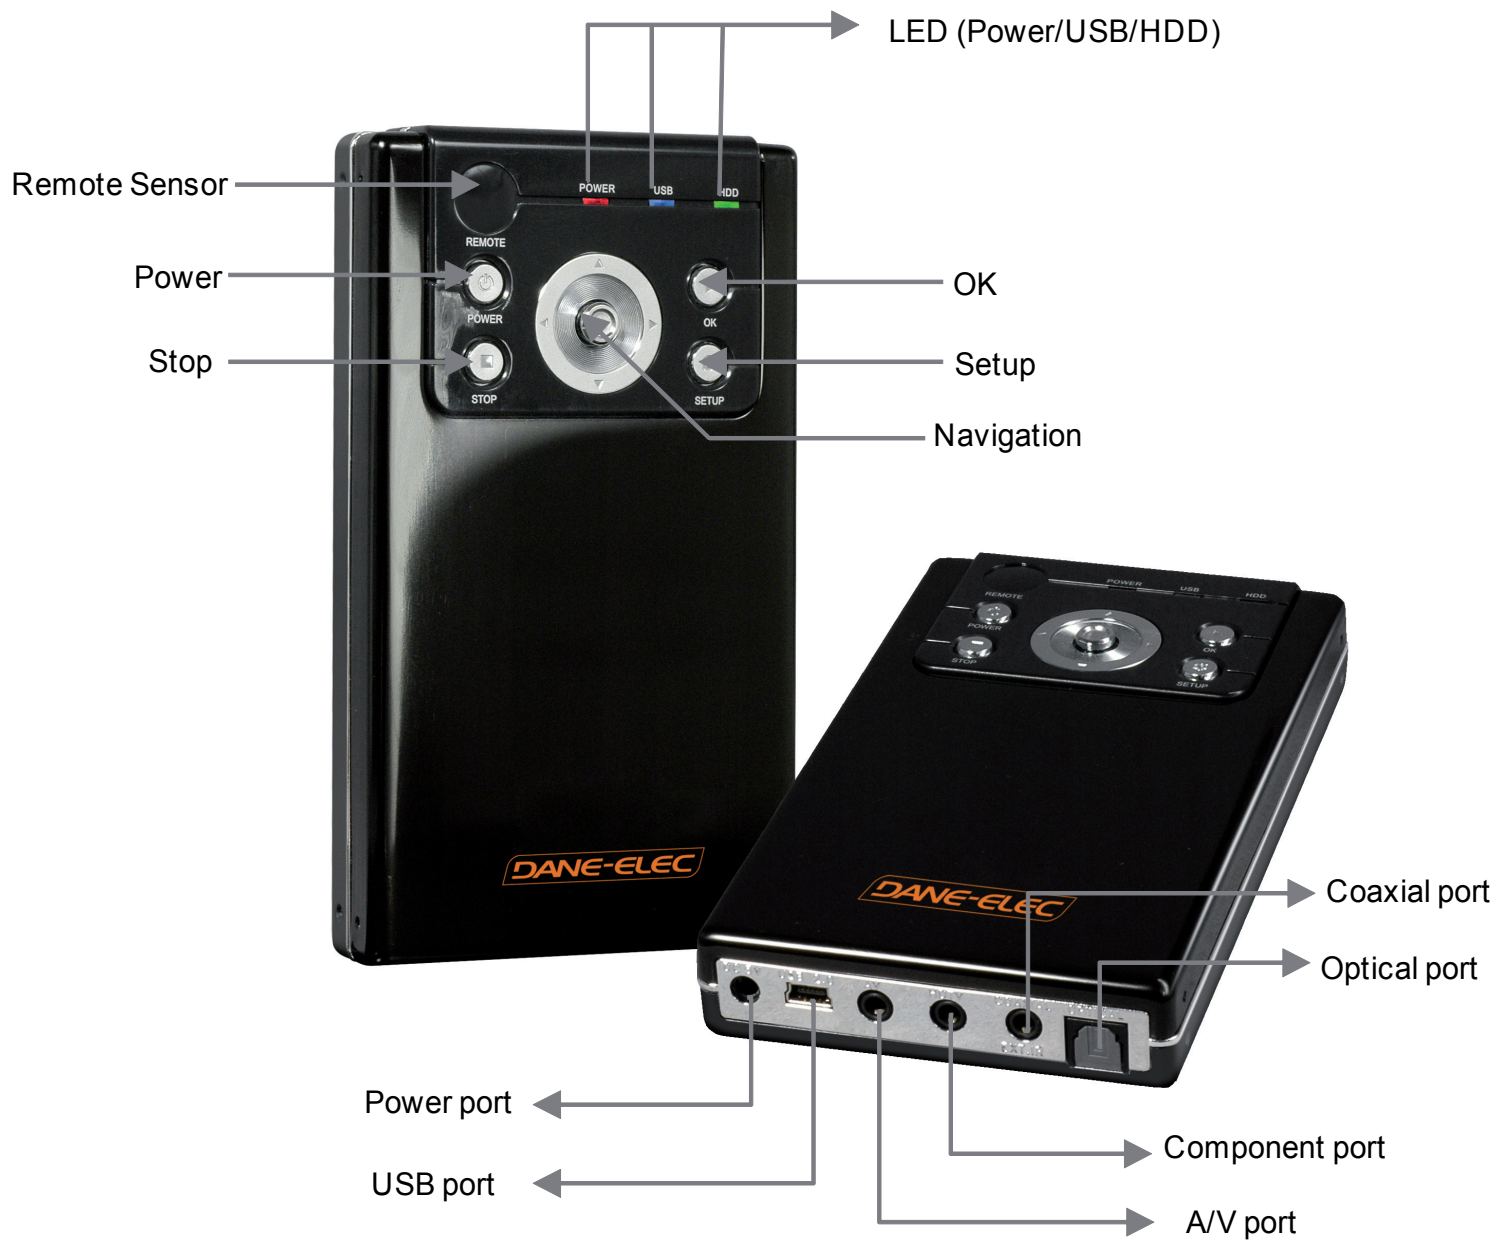

6. Remote Control



1.Power

2. Setup

3. Change the TV OUT mode

4. Function Key

5. MEDIA switch from

MIXED→VIDEO → AUDIO → PHOTO → MIXED

6. Pause

7. Stop

8. Enter to confirm the selection

9. Navigation-Arrow Keys

10. Return to the last folder

11. Play

12. SUB-T select the subtitles

13. Play list

14. Audio select the subtitles

15. A-B setup repeat segment

16. Menu for DVD

17. Repeat

18. Title for DVD

19. Bookmark

20. Show the info for file playing

21. Zoom

22. Goto

23. Page up

24. Volume up

25. Fast Forward

26. Fast Reverse

27. Page down

28. Volume down

29. Skip forward

30. Skip backward

31. FMTX

32. Mute

33. Random

34. Rotation to rotate the picture

 
7. Using the device

By default your So Road Movie is set in the English language. To change the language please follows the instructions below:

- Turn on your So Road Movie




- Select the Setup button on the remote

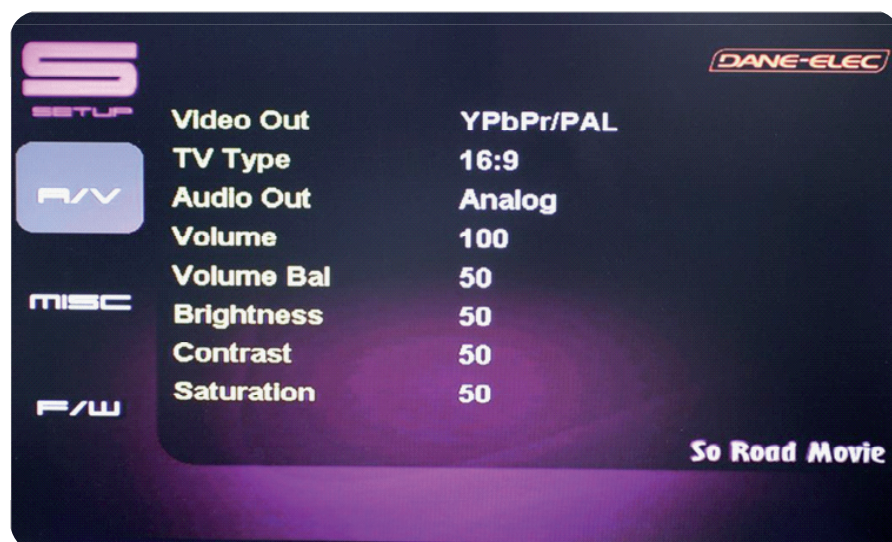


7. Using the device

 - With the keys "Up, Down, Left, Right" on your remote select "Misc"

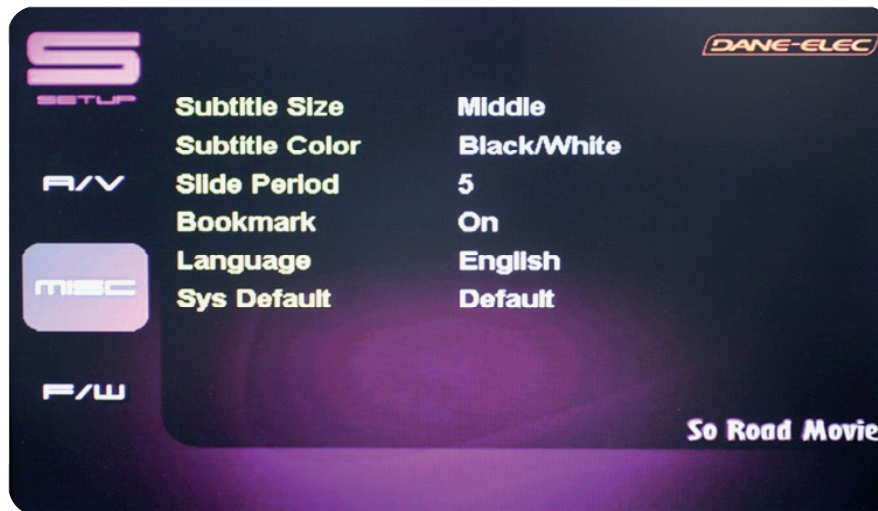


 - With the keys "Up, Down, Left, Right" on your remote select "language"

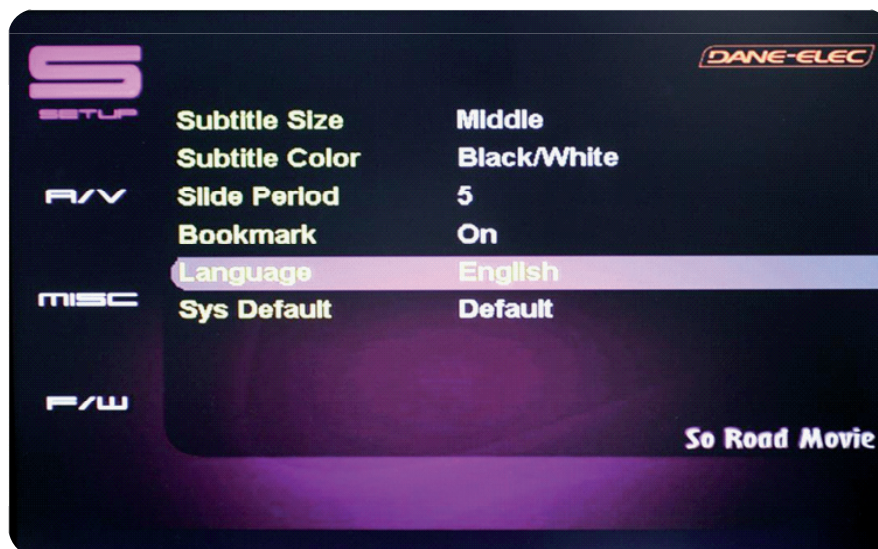


7. Using the device

 - To select your language in the list, press key right

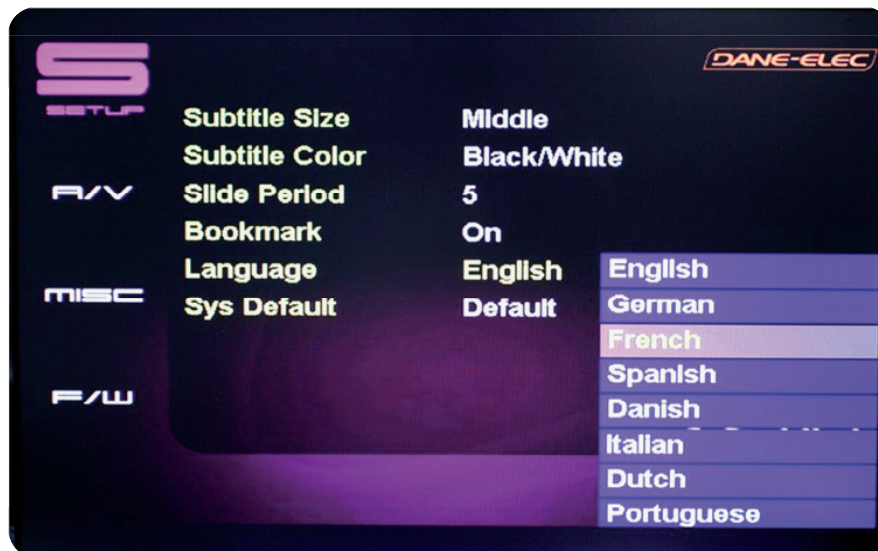


 - Select the desired language for example : « French » in the list
- Then select "ENTER"
- Press "Set Up" to save the change

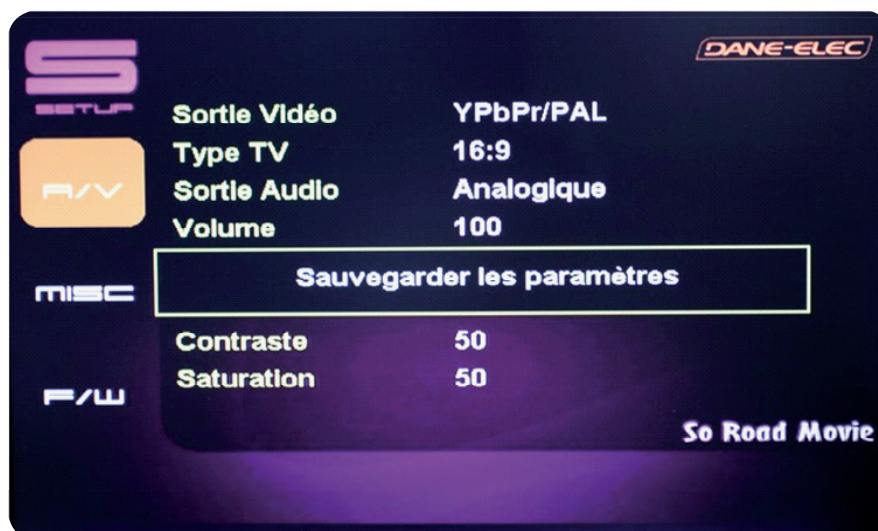

7. Using the device

 - The language is amended

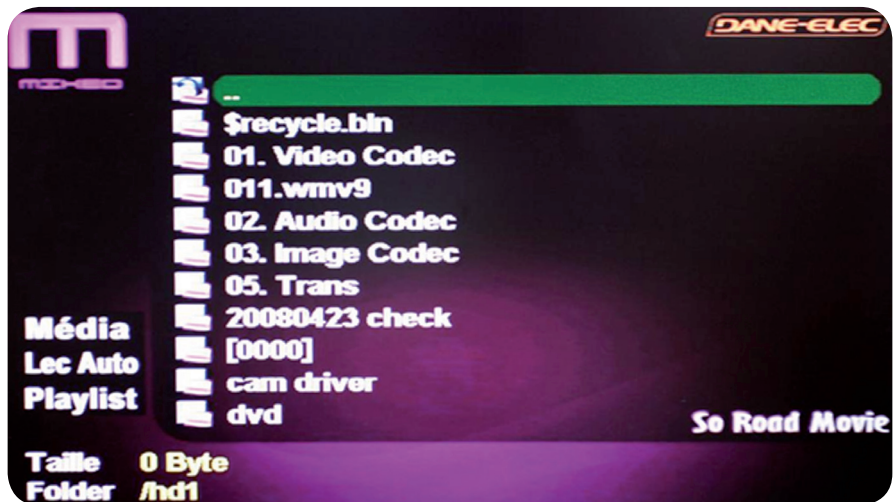

8. Installation and Connection

Video and Audio Connections

Your So Road Movie multimedia player supports Composite, S-Video or Component connections. Depending on the capabilities of your TV, you only need to make one video connection from these options. To hear sound through your TV, use audio connectors (RCA 2-CH) to connect the So Road Movie multimedia player to the corresponding AUDIO-IN jacks on your TV or Hi-Fi Device.

➔ Connection with ordinary (Composite) TV output



- Connect So Road Movie and your TV using the yellow video cable (cable supplied).
- Connect your So Road Movie Multimedia player and your TV to a power .
- Select appropriate video input mode on your TV until you get the initial So Road Movie screen.
- Connect left (white), right (red) sound output to the appropriate terminal of your TV or Hi-Fi Device using the 2-CH RCA cable (cable supplied).

➔ Connection to Component Output



- Connect the So Road Movie media player to your TV using a Dual cable as shown in the image above.
- Turn on the So Road Movie and TV.
- Select appropriate video input mode on your TV (in this case, Component input mode) (cable not supplied).
- Press TVOUT button on Remote Control (RC) to change AV out to Component Out on your So Road Movie
- Component connection is commonly used on most HDTV's, DLP-TV's, Plasma TVs etc.
- When you have a multi channel decoder/amplifier with coaxial input, you can enjoy 5.1CH high quality sound through coaxial cable.
The above illustration shows how to connect with coaxial cable (cable not supplied).

8. Installation and Connection

➔ Connection to Coaxial output



When you have a multi channel decoder/ amplifier with coaxial input, you can enjoy 5.1CH high quality sound through coaxial cable.

The above illustration shows how to connect with coaxial cable (cable not supplied).

➔ Connection to Optical output



When you have a multi channel decoder/ amplifier with optical input, you can enjoy 5.1CH high quality sound via optical cable.

The above illustration shows how to connect with optical cable. (cable not supplied).

➔ Connection to Computer




To transfer data or files from pc to your So Road Movie Multimedia Player. Connect So Road Movie Multimedia Player to your computer using the Dual USB cable (cable supplied) on the back side of your PC or on the two USB side of your notebook. When So Road Movie is connected to your PC the ON/OFF button power of the So Road Movie do not function. This button served only when the So Road Movie is connected to a TV screen with power supply.

Upon connection your PC (Win-ME/2000/XP) should recognize the new USB connected drive without installing driver.

9. So Road Movie Setup Menu

→ Audio/Video Setup

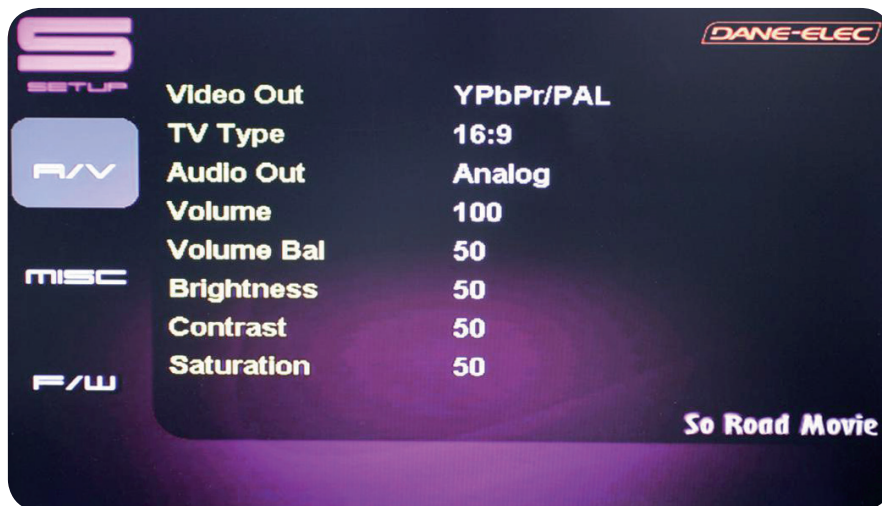

1) Video Out :

Supports NTSC/S-Video, YPbPr/480i, YPbPr/480p, YPbPr/720p, YPbPr/1080i, PAL/S-Video, YPbPr/PAL

2) TV Type :

Supports 4 X 3 Letter Box (Ordinary TV), 16:9 (HDTVs)

3) Audio Out :

Supports Analog, or Digital Audio

4) Volume :

You can control the volume in the range 0~100

5) Volume Bal :

You can control the volume balance in the range 0~100

6) Brightness :

You can control the brightness in the range 0~100

7) Contrast :

 
You can control the contrast in the range 0~100

8) Saturation :

You can control the saturation in the range 0~100

9. So Road Movie Setup Menu

→ Setup/Various

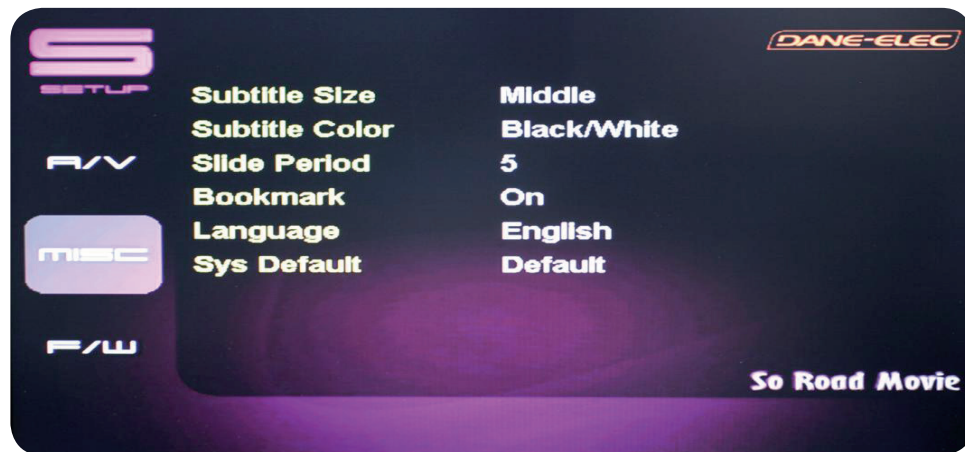

1) Subtitle Size :

You can select the subtitle font size (Normal/Large)

2) Subtitle Color :

You can change the color of the subtitle and its outline (Black/White, Black/Yellow, White/Yellow)

3) Slide Period :

You can set the slide show time interval (3 ~100sec)

4) Bookmark :

You can turn On/Off bookmark while you playback or load a file

5) Language:

 
 
Select the language you prefer to use with your So Road Movie Multimedia player. Currently it supports English, French, Spanish, Danish, Italian, Dutch, Portuguese, German

6) Sys Default :

You can change the setting of the system default

9. So Road Movie Setup Menu

→ Firmware Setup

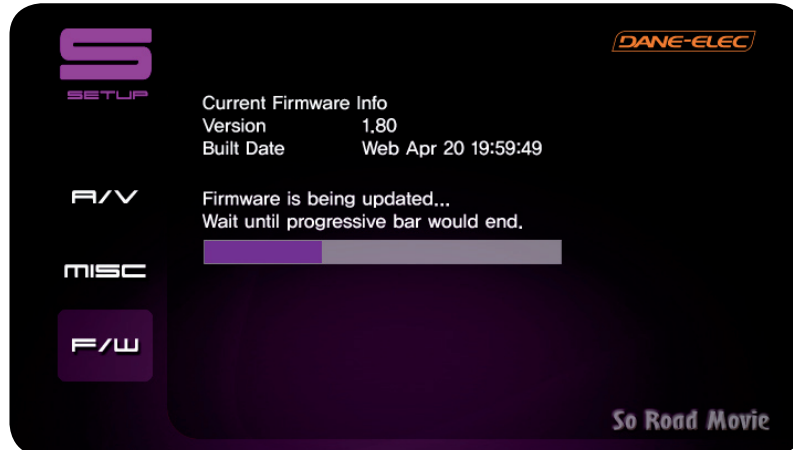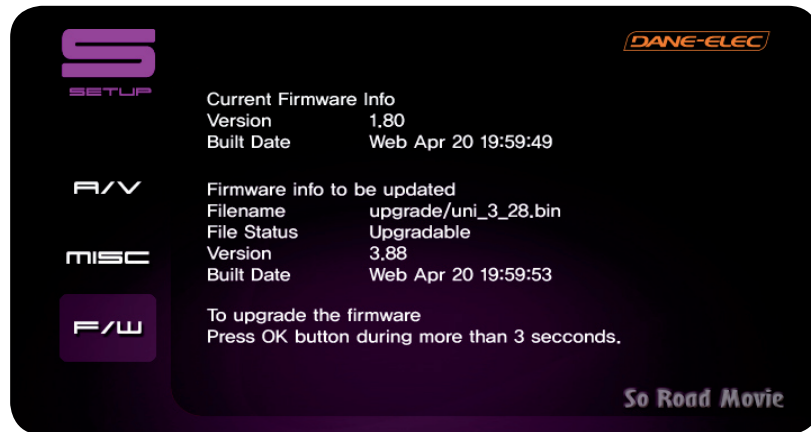

- 1) Connect your So Road Movie to your PC with the USB cable and turn it on.
- 2) Your PC recognizes your So Road Movie as an external hard disk.
- 3) Create a folder 'UPGRAD' at the root of the hard disk.
- 4) Download the new firmware (on www.danedigital.com)
- 5) Copy the new firmware that you just have downloaded in the 'UPGRAD' folder.
- 6) Turn off your So Road Movie and plug it on your TV.
- 7) Browse in the SETUP Menu firmware.
- 8) Press and hold ENTER button for more than 3 seconds.

9. So Road Movie Setup Menu

 
Driver installation for Windows ME/XP/2000

- 1) Windows ME/XP/2000 already have a preinstalled version of the USB driver.
- 2) Your PC will automatically recognise your So Road Movie as soon as you have plugged in the USB cable (check if your So Road Movie is on during its plug in).
- 3) You should have the new hard disk in Windows explorer.

9. So Road Movie Setup Menu

➔ Video Files Playback

Press several times on "Media" key on the remote control to choose multimedia files According to the type of media (Video, Audio, Picture, Mix).

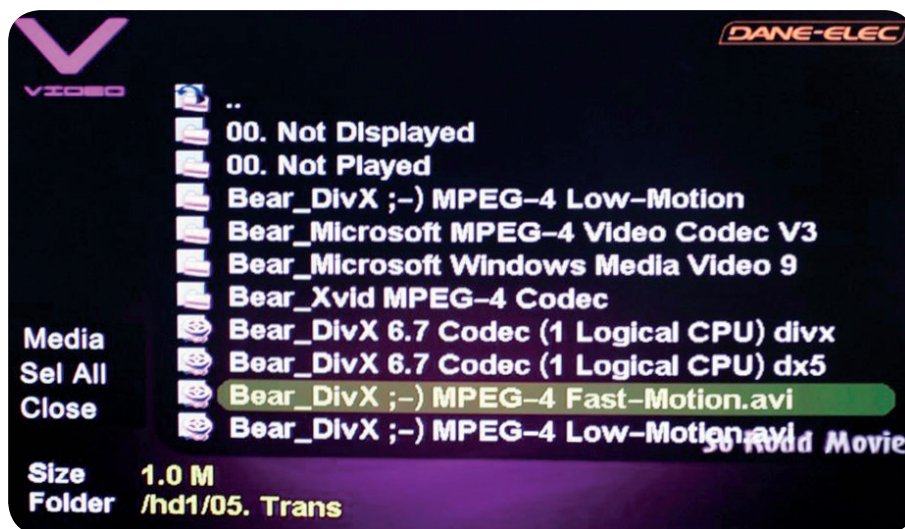

On Video mode, only Video Files will be visible in the current directory.

1) Select "Video" with "MEDIA" key on your remote control. You will see the list of your Video files displayed.

2) Select the Video file you want to read with ▼ or ▲ keys on the remote control, then click "ENTER".

To position yourself on the left menu, press browser key ► on the remote control. With ▼ or ▲ keys you can select : **Media, Auto Playback, Playlist.**

Media : This function enables you to launch the complete playback of the current directory, on the media selected (see on the figure below, the video files).

 
Playlist : (see playlist function).

9. So Road Movie Setup Menu

➔ Audio Files Playback

Press several times on "Media" key on the remote control to choose multimedia files According to the type of media (Video, Audio, Picture, Mix).

On Audio mode, only Audio Files will be visible in the current directory.

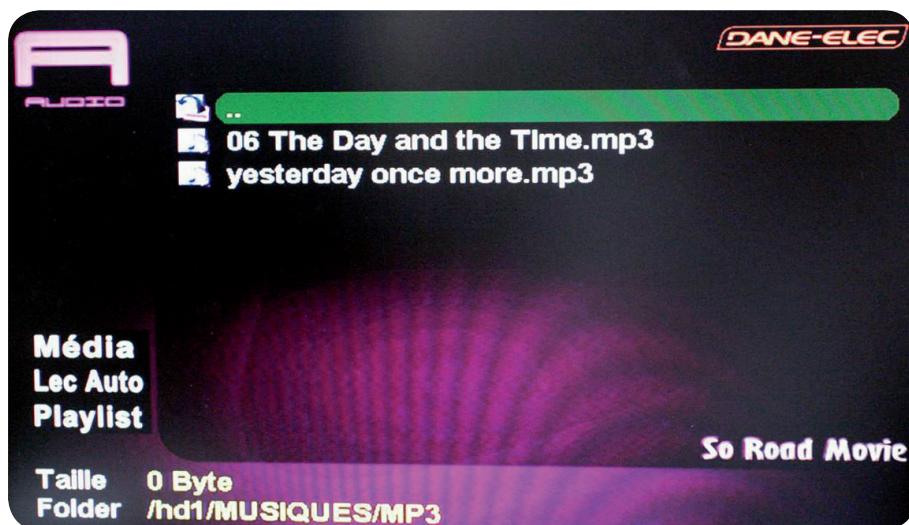

1) Select " Audio" with "MEDIA" key on your remote control. You will see the list of your Audio files displayed.

2) Select the Audio file you want to read with ▼ or ▲ keys on the remote control, then click "ENTER".

To position yourself on the left menu, press browser key ► on the remote control. With ▼ or ▲ keys you can select : **Media, Auto Playback, Playlist.**

Media : This function enables you to launch the complete playback of the current directory, on the media selected (see on the figure below, the audio files).

 
Playlist : (see playlist function).

9. So Road Movie Setup Menu

➔ Photo Files Playback

Press several times on "Media" key on the remote control to choose multimedia files According to the type of media (Video, Audio, Picture, Mix).

On Photo mode, only Photo Files will be visible in the current directory.

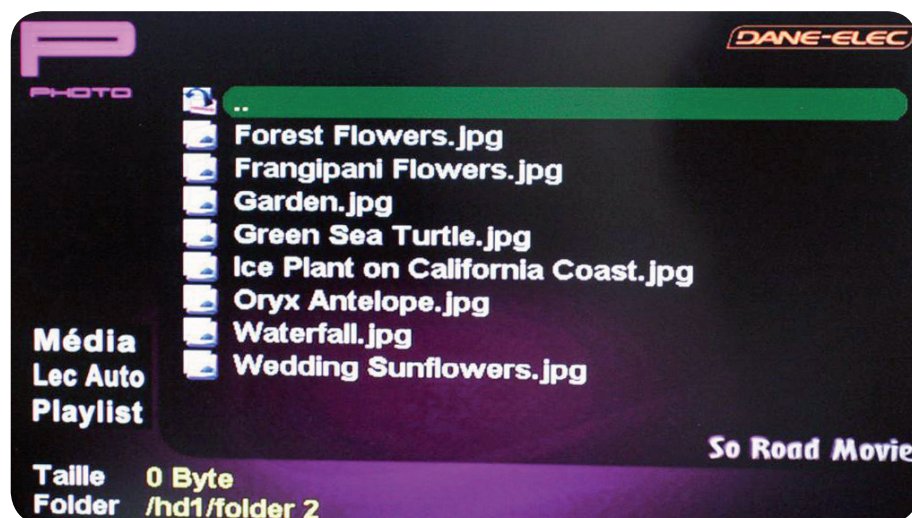

1) Select " Photo" with "MEDIA" key on your remote control. You will see the list of your Photo files displayed.

2) Select the Photo file you want to read with ▼ or ▲ keys on the remote control, then click "ENTER".

To position yourself on the left menu, press browser key ► on the remote control. With ▼ or ▲ keys you can select : **Media, Auto Playback, Playlist.**

Media : This function enables you to launch the complete playback of the current directory, on the media selected (see on the figure below, the photo files).

 
Playlist : (see playlist function).

9. So Road Movie Setup Menu

→ All Files Playback

Press several times on "Media" key on the remote control to choose multimedia files According to the type of media (Video, Audio, Picture, Mix).

On Mix mode, only Audio Files will be visible in the current directory.

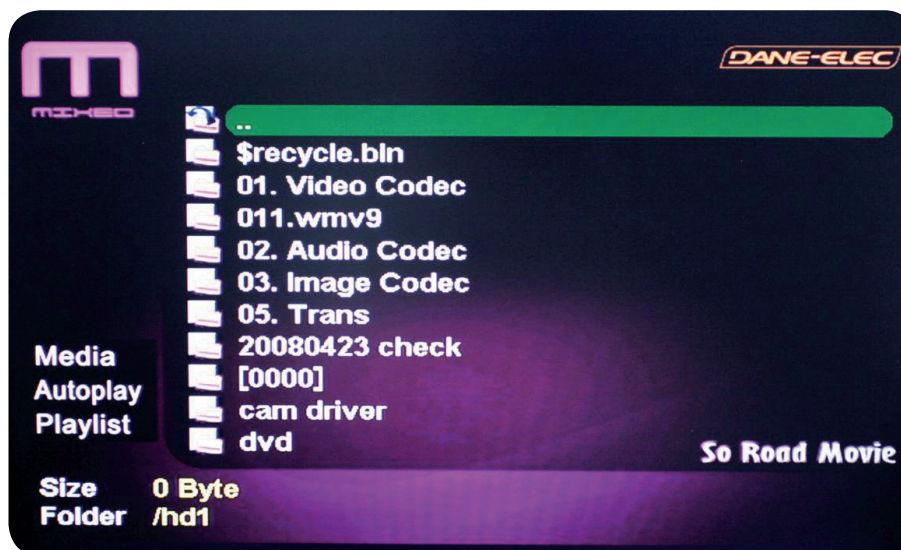

1) Select " Mix" with "MEDIA" key on your remote control. You will see the list of your all your files displayed.

2) Select the media you want to read with ▼ or ▲ keys on the remote control, then click "ENTER".

To position yourself on the left menu, press browser key ◀ on the remote control. With ▼ or ▲ keys you can select : Media, Auto Playback, Playlist.

 
Media : This function enables you to launch the complete playback of the current directory, on the media selected (see on the figure below, the all files).

Playlist : (see playlist function).

9. So Road Movie Setup Menu


→ Playlist

With your So Road Movie, it is possible to create a playlist. Creation of your playlist

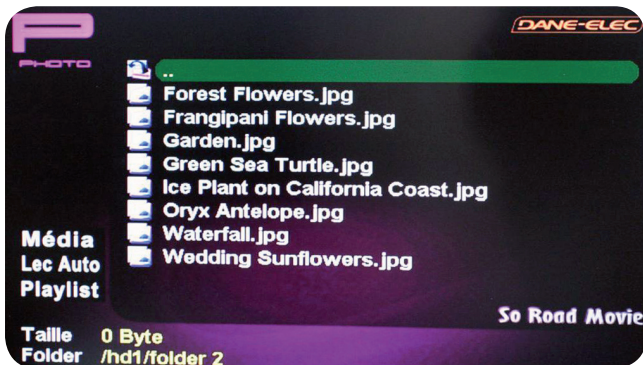


1) Press browser ◀ key on the remote control, so that you position yourself on the left menu.

 2) Press twice on ▼ key on the remote control to select "Playlist" then "ENTER".

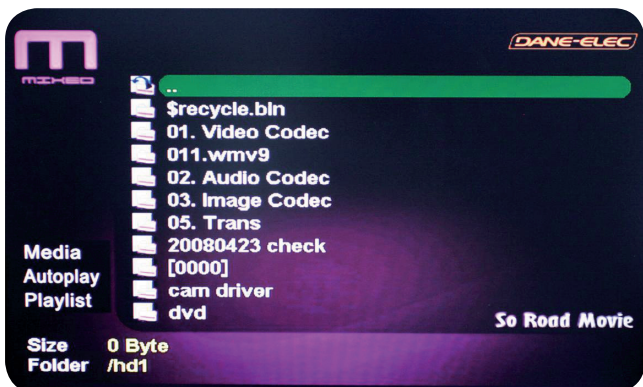

 3) The screen displays "MIX". All the media files in the current directory appear. *With browser keys ▲ or ▼ on the remote control, choose the media to include in your playlist, then click "ENTER". Repeat from the star step(*) until you come to the end of your choice. At this time, with this ◀ key on the remote control, you can return to the left menu and with ▼ key, choose "Close"

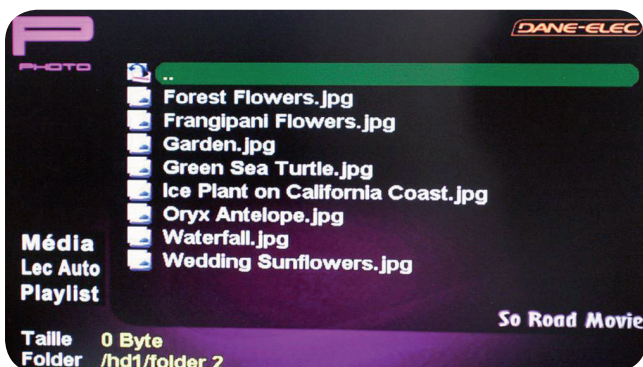

The list of all selected files appear in the left window.

Auto Playback : launches the playback of your Playlist.

Edit : make you return to the previous menu so that you can add or delete files from your Playlist.

Delete All : delete your playlist

Close : closes your playlist

10. Troubleshooting

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair.

No Screen Display. Video Output not working.	<ol style="list-style-type: none"> 1. Press the TVOUT button on So Road Movie remote to toggle between TVOUT settings. 2. Check the TV-OUT settings and cable-type on the So Road Movie player and ensure that it is consistent with the VIDEO-IN settings of the TV. 3. Ensure that the Video Cable is securely connected to the So Road Movie player and to the TV.
The Player does not respond to the Remote Control. Menu Items cannot be selected.	<ol style="list-style-type: none"> 1. Reduce the distance between the Remote and the So Road Movie Player and try again. 2. Replace remote batteries 3. Perform a Hardware Reset Procedure
So Road Movie player does not recognize the HDD.	<ol style="list-style-type: none"> 1. Connect your So Road Movie to your PC (USB) 2. Check if your data are present on your SO Road Movie hard drive. 3. If our data have disappeared, contact the After Sales Service
Unable to Play DivX®, or Xvid, or MPEG, or AVI video files etc. (or Black Screen problem)	<ol style="list-style-type: none"> 1. Ensure that the selected video file contains supported video codec. 2. Defragmenter the So Road Movie-HDD. 3. If playing a file from a Network-shared PC, there may be too much traffic on the network (check for virus). Try to reboot your PC and establish connection again.

WARNING: To reduce the risk of fire or electric shock, do not expose your So Road Movie Media player to rain or moisture.

For any further assistance please visit our support site at www.danedigital.com